

# Albatross WTS Filtration System Operating Instructions

## Assembly



Step 1 Attach to Pump to the WTS System



Step 2 Attach the Hoses to the Pump






Re-Attach the Coupler and Elbow to the pump




Re-Attach the Hose Fittings to the pump

### Step 3 Attaching the Control Box

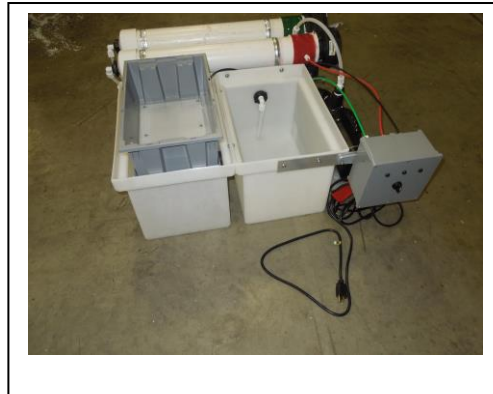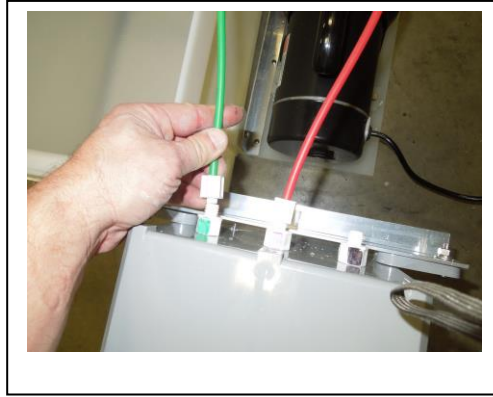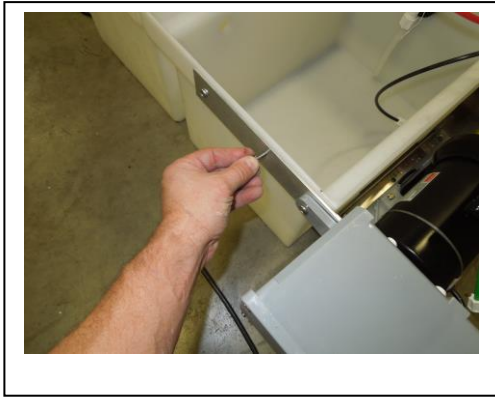


Attach the Aluminum Bracket and Control Box to the 2<sup>nd</sup> Tank with the 1/4" Bolts.

Step 4 Level Switch

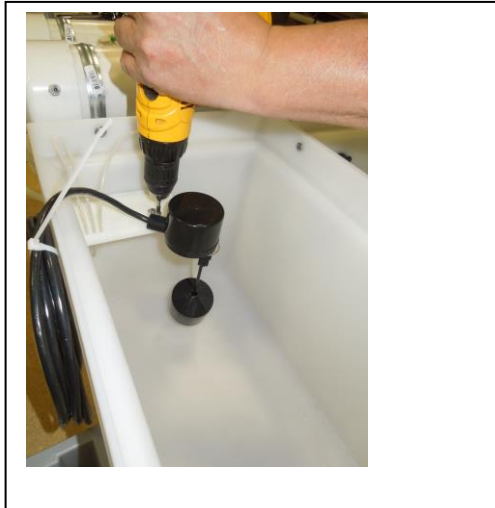

Step 6 Return Tank Elbow

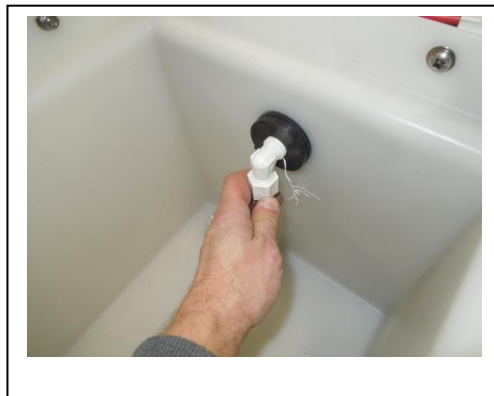


## Operating the WTS System

1. Place the Pre-Filter box is on the left tank.
2. Place the WTS under the washout booth .
3. Make sure the filter caps are attached.
4. Connect a hose to the Water Drain (by the pump)
5. Make sure the control box is switched off (to the left)
6. Plug the control box in
7. Fill the left tank with water



8. Prime the pump. There is a priming port on top of the pump.
9. Remove the cap and pour water into the port while the pump is running. (The easiest way to prime the pump is to use a hose and force water up the intake tube located in the first chamber.
10. Turn on the control box. It will take a few minutes before the water fills the canisters and begins to drain out of the system.

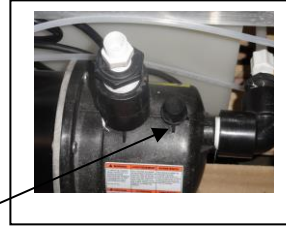

The system will shut off when the water gets low.

The system is now ready for use.

### Maintenance

When the filters are full an alarm will sound and the green light on the control box will illuminate. Open the Cam Coupler to access the filters. The easiest way is the pull the unit out and tip it up slightly. The canisters are full of waste water.

### Replacement Filters

Red #5025                  Green #5026                  Black #5028